## **Quick Reference**

The PowerSeries Neo Alarm System uses shortcut keys to access options or features on all models of keypads. When using an LCD keypad, the PowerSeries Neo Alarm System additionally uses a menu based navigation system. The scroll (>>> keys can be used to [Scroll] through the list of options contained within the current menu. For more information on keypads see 2 "Understanding your Keypad Display".

NOTES: Some features must be enabled by installer.

Bypass Groups are not permitted in UL listed installations.

[\*] - If configured by installer

Chatu	111111	THE STATE OF THE S				
	s Lights		Function	on Keys	Emergen	cy Keys
<b>/</b>	zones must be secure this light to activate.	stem normal. Must be on to arm system. All ed or bypassed and the system disarmed for		Stay Arm	(4)(4)	Fire Alarm
	Armed- Indicates sy Armed light are both	stem is armed. If the Ready light and the on it indicates an Exit Delay is in progress.		Away Arm	<b>+ +</b>	Medical Alarm
$\triangle$	Trouble - On indicat	es a system malfunction or tamper. Flashing yad has a low battery condition. Follow the	(A)	Chime	(0)(0)	Panic Alarm
instructions displaye the trouble turns off		ed or enter [*][2] to view trouble. Correcting		Reset Sensors		Alam
AC Power - Indicate will turn off when A		es AC Power is present. The AC Power light C is absent.		Quick Exit		
Actio	n .	Press				
Armi	ng and Disarming					
Away Arm		for 2 seconds + [Access Code*]				
Stay Arm		for 2 seconds + [Access Code*]				
Night Arm		When armed in stay mode * 1 + [Access Code*]				
Disarm		[Access Code]				
No-Entry Arming		+ [Access Code*]				
Quick Arm/Quick Exit		* •				
Abort Arming Sequence		[Access Code]				
Вура	ssing - All bypass	commands begin with *1 + [Ac	cess Code	e*]		
Bypass Individual Zones		[3 Digit Zone #]				
Bypass All Open Zones		9 9 8				
Recall Last Bypass		9 9 9				
Clear 1	Bypass	0 0 0 OR				
Cicar		[Scroll] Bypass Options +				
Progra	am Bypass Group	[3 digit zone #s] + (9) (5) OR				
1		[3 digit zone #s] + [Scroll] Bypass Options +				
Load I	Bypass Group	9 9 1 OR				
Common Functions		[Scroll] Bypass Options + (*) + [Scroll] Bypass Group + (*)				
	ne and Date	* B [Master Code] + D 1				
	Chime ON/OFF					
Change Brightness		* 6 [Master Code] + 1 2 + 3				
Change Contrast		* B [Master Code] + 1 3 + 2 >				
Add/delete User		(*) (5) + [Master Code] + [Access Code] + (1)				
Reset Smoke Detectors		(*) OR (*) 7 (2)				
View Troubles		* 2 + [Access Code*] + (>)				
View Alarms		* (3) + [Access Code*] + (3)>				
Perform System Test		* 6 [Master Code] + 0 4 + 3>				
Duzzo	r Volum <b>s</b>	* 6 [Master Code] + 1 4 + 3				